



## ST1K Sony Alpha TTL Kit

Item number 46040

### Included in the Box

- TTL Kit with Hotshoe
- 1/16" Hex Key

### Compatible Strobes

- Ikelite DS160, DS161
  - Ikelite DS125 above serial number 5000
  - Ikelite DS51
  - Ikelite DS50 above serial number 70000
  - Ikelite DS200 above serial number 7163
- » **SEA&SEA, INON, Nikonos, and Ikelite non-DS strobes are not capable of powering the TTL Kit circuitry and thus will not provide TTL operation with this kit. These strobes may operate in manual power modes.**

## Installation and Use

### Setting the TTL Circuit

A small slide switch on the side of the TTL circuitry box allows you to switch between TTL and Manual strobe exposure.

Use "A" for TTL; Strobe(s) must be set to TTL. Use of strobes' manual fractional power settings will provide manual flash exposure. Full power flash is not supported with the circuitry set to TTL.


Use "B" for Manual; Strobe(s) may be used in any manual power setting including Full power and any fractional power setting.

- » **The circuitry switch must be set prior to installation in the housing. This setting cannot be changed while the housing is underwater.**

### Removing the Hotshoe

Your housing came with a manual hotshoe installed. This hotshoe must be removed prior to installing the TTL kit.


1. The hotshoe is attached by male connector to the female socket of the bulkhead. Depress the tab on the male connector.

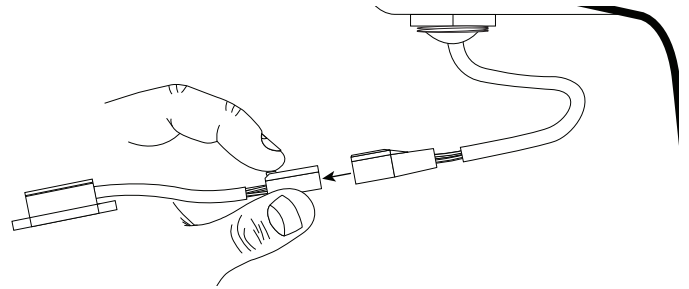

2. Hold the female connector while gently pulling the male connector out of its socket.
3. Store the manual hotshoe in a small sealed plastic bag along with your spare parts.
4. The manual hotshoe may be reinstalled at a later time to bypass TTL operation.

### Installing the TTL Kit

1. Remove the camera mounting tray from the housing.
2. Using the included 1/16" hex key, loosen the set screw on the left side of the housing mounting tray.

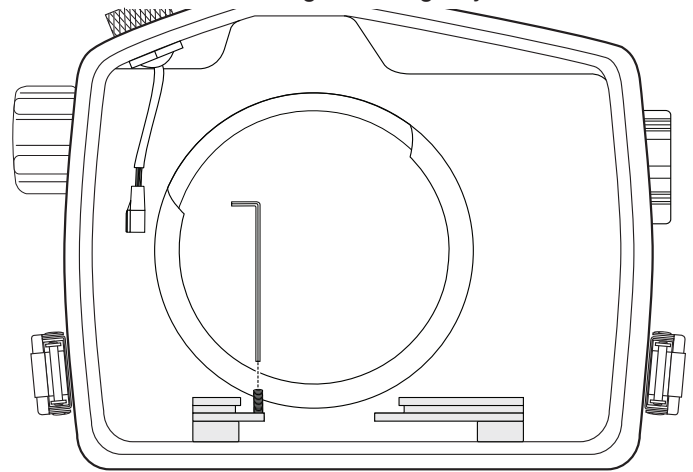

3. Looking into the housing from the back, orient the TTL kit with the hotshoe on your left and the male connector end towards the front of the housing.
4. Slide the TTL kit into the center of the housing mounting tray. The male connector should come out the front of the housing mounting tray near the port opening.
5. Re-tighten the 1/16" set screw until it stops. Do not over-tighten.

6. Line up the tab of the male connector with the female socket of the bulkhead and push gently together. The tab will click into place when properly connected.

## Connecting Your Camera

1. Install your camera in the housing using the camera mounting tray.
  2. Orient the arrow on the top of the TTL Kit hotshoe to point towards the front of the camera.
  3. Slide the TTL kit hotshoe onto the camera's hotshoe.
  4. Press the back of the hotshoe firmly to ensure that it is as far forward as possible on the camera.
- » **Failure to push the hotshoe far enough forward may result in lack of TTL or failure to fire strobes.**

## Limited Warranty

This Ikelite product is warranted against any manufacturing defects for a period of one (1) year from the original date of purchase. To obtain warranty service, the product must be returned to Ikelite postage paid. Ikelite will, at its sole discretion, repair or replace such products, and will return to customer postage paid. All other claims of any nature are not covered. Except as mentioned above, no other warranty expressed or implied applies to this Ikelite product.

