





NT1 Nikon TTL Hotshoe

Product Number 46061

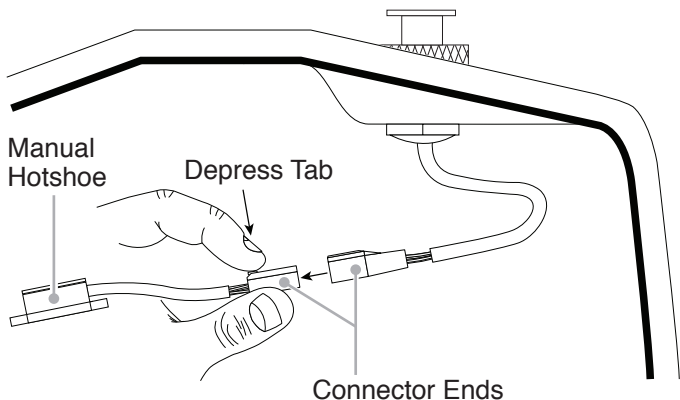

Manual Hotshoe Removal

- Depress Hotshoe Connector Tab and pull Connector Ends apart as shown.

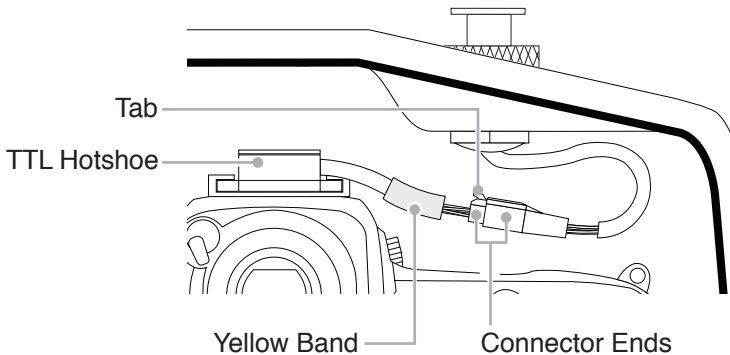

5-connector Hotshoe Installation

1. Line up TTL Hotshoe Connector End with Bulkhead Connector End and push together. Tab will click into place and be in the “up” position when properly connected.
2. Slide Hotshoe forward into camera mount until Hotshoe stops. Make sure Hotshoe is all the way forward in mount.
3. Connect strobe and test system.
 - 5-connector Hotshoe has a Yellow Band
 - An Ikelite TTL converter may be added for TTL exposure. Requires use of a current-model Ikelite DS-series strobe.
 - DO NOT use 5-connector cords without a TTL converter, otherwise, camera malfunction or damage could occur.

© 2016 Ikelite Underwater Systems